




## Air Cleaner (19.10.01)


### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00 Charging System - General Information)


2.  **CAUTION:** When removing the air cleaner outlet pipe, make sure the rubber seal, on the LH side lower air pipe, does not become dislodged. Make sure the seal is properly seated onto the lower pipe.

Remove the air cleaner outlet pipe.


- Remove the 2 screws.
- Loosen the clip.

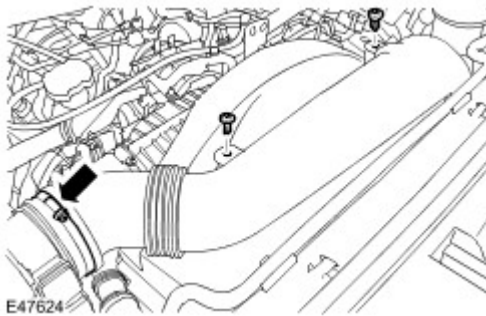

3. Remove the air cleaner assembly.
  - Disconnect the electrical connector.
  - Release the air cleaner from the 2 grommets.

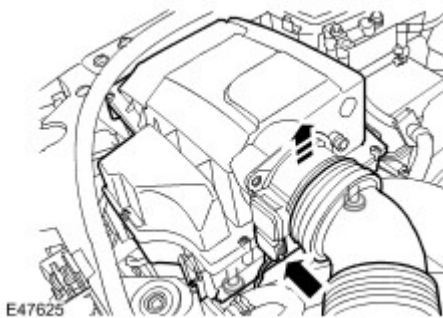

4. **NOTE :**
  - Do not disassemble further if the component is removed for access only.
  - Remove the manifold absolute pressure (MAP) sensor.
    - Remove the 2 Torx screws.
    - Remove the O-ring seal.

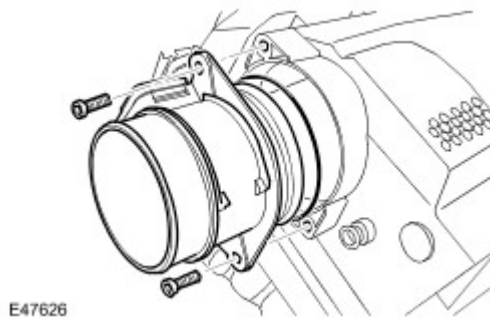

## Installation

1.



**CAUTION:** When installing the air cleaner outlet pipe, make sure it is correctly seated onto the lower air pipe, so that an air-tight seal is made.

**NOTE :**

When installing the air cleaner, make sure the locating pegs fit securely into the grommets.

To install, reverse the removal procedure.