



Charge Air Cooler (19.46.19)

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .

Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

3 .

Remove the radiator. For additional information, refer to [Radiator \(26.40.01\)](#) (Section 303-03)

4 .

Remove the charge air cooler.



Remove the 2 retaining pins.



E49355

Installation

1 .

Install the charge air cooler.



Install the 2 retaining pins.

2 .

Install the radiator. For additional information, refer to [Radiator \(26.40.01\)](#) (Section 303-03)

3 .

Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)