




Evaporative Emission Canister Purge Valve (17.15.39)


Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the intake manifold casting. For additional information, refer to [Intake Manifold \(30.15.02\)](#) (Section 303-01)
3. **NOTE :**
Note the fitted position.
Release the purge valve from the mounting bracket.
 - Remove the bolt.

4.  **CAUTION:** Before disconnecting or removing the components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

Remove the purge valve.

- Disconnect the 2 hoses.
- Disconnect the electrical connector.

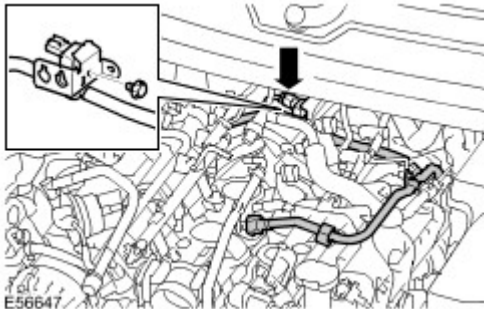

Installation

1. Connect the purge valve.
 - Connect the hoses.
 - Connect and secure the electrical connector.
2. **NOTE :**
Align to the position noted on removal.
Install the purge valve, align the peg and tighten the bolt to 6 Nm (4 lb.ft).
3. Install the intake manifold casting. For additional information, refer to [Intake Manifold \(30.15.02\)](#) (Section 303-01)

- 4 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)