

Published : May 21, 2004



## Engine Coolant Temperature (ECT) Sensor (18.30.10)

### Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the throttle body gasket. For additional information, refer to [Throttle Body Gasket](#) (Section 303-04)
- 3 . Remove the ECT sensor.
  - Position an absorbent cloth to collect fluid spillage.
  - Disconnect the electrical connector.
  - Remove and discard the O-ring seal.



### Installation

- 1 . To install, reverse the removal procedure.
  - Clean the components.
  - Tighten the ECT sensor to 18 Nm (13 lb.ft).
  - Top-up the coolant.