




Engine Oil Pressure (EOP) Sensor (12.60.50)


Removal


1. Raise and support the vehicle.

2.  **CAUTION:** Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.


Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)


3. Remove the radiator access panel.


 Remove the 4 bolts.

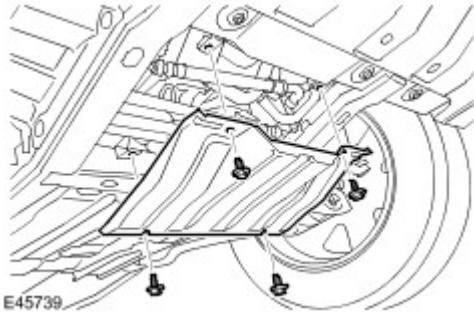



4. Remove the EOP sensor.

 Disconnect the electrical connector.

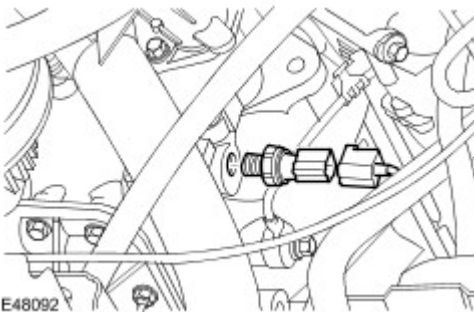 Position a container to collect the fluid.



Installation

1. To install, reverse the removal procedure.
 -  Clean the component mating faces.
 -  Tighten the oil pressure sensor to 13 Nm (10 lb.ft).

- 2.

Check and top-up the engine oil.