




Knock Sensor (KS) LH (18.30.28)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the KS.
 - Disconnect the electrical connector.
 - Release the knock sensor electrical connector retaining clips.
 - Remove the bolt.

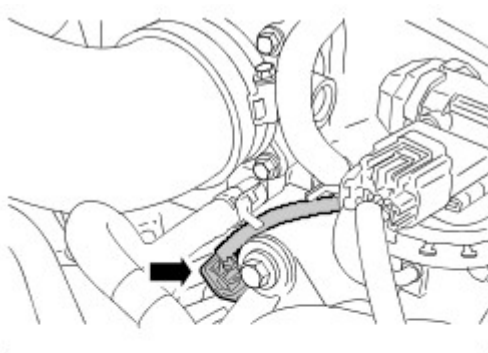

Installation

1. To install, reverse the removal procedure.
 - Clean the component mating faces.
 - Tighten the bolt to 20 Nm (15 lb.ft).