

Published : May 21, 2004



Mass Air Flow (MAF) Sensor (19.22.25)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the MAF sensor.
 - ▶ Remove the 2 Torx screws.
 - ▶ Disconnect the electrical connector.



Installation

- 1 . To install, reverse the removal procedure.
 - ▶ Tighten Torx screws to 2 Nm (1.5 lb.ft).