

Engine Coolant Temperature (ECT) Sensor (18.30.10)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the throttle body. For additional information, refer to [Throttle Body Gasket](#) (Section 303-04)
- 3 . Remove the ECT sensor.
 - ▶ Position the engine gas recirculation (EGR) coolant hose aside for access.
 - ▶ Position an absorbent cloth to collect fluid spillage.
 - ▶ Disconnect the electrical connector.
 - ▶ Remove the sensor and discard the seal.



Installation

- 1 . To install, reverse the removal procedure.
 - ▶ Clean the components.
- 2 . Tighten the ECT sensor to 18 Nm (13 lb.ft).
- 3 . Top-up the coolant.