



Engine Oil Pressure (EOP) Sensor (12.60.50)

Removal

1 .



CAUTION: Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.


Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

2 .

Remove the radiator access panel.



Remove the 4 bolts.

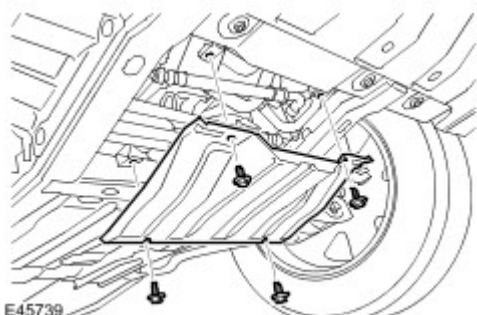

3 .


Remove the oil pressure sensor.



Disconnect the electrical connector.



Position a container to collect the fluid.

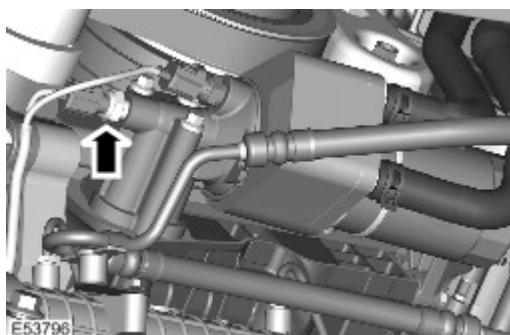

Installation

1 .

To install, reverse the removal procedure.



Tighten the oil pressure sensor to 12 Nm (9 lb.ft).



Tighten the M6 bolts to 10 Nm (7 lb.ft).



Tighten the M10 bolts to 45 Nm (33 lb.ft).

2 .

Check and top-up the engine oil.