


Fuel Temperature Sensor (19.22.08)



Removal

1. Secure the hood in the service position.
 - Release the support struts.
2. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
3. Remove the engine cover. For additional information, refer to [Engine Cover - 4.4L \(12.30.50\)](#) (Section 501-05)

4.  **CAUTION: Always plug any open connections to prevent contamination.**

Remove the fuel temperature sensor.

- Disconnect the electrical connector.
- Position an absorbent cloth to collect fluid spillage.

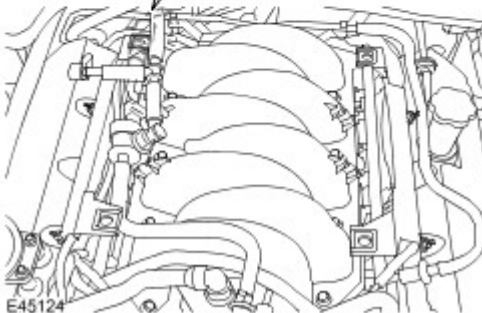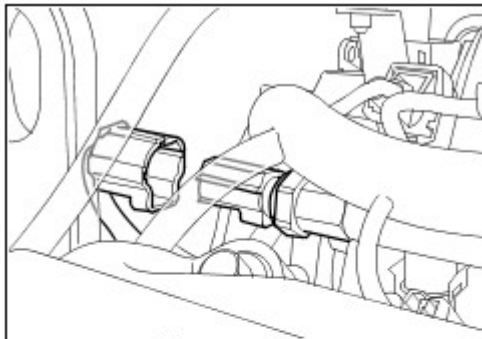

Installation

1. To install, reverse the removal procedure.
 - Clean the component mating faces.
 - Apply sealant to the sensor thread.Tighten the sensor to 7 Nm (5 lb.ft).

