


## Mass Air Flow (MAF) Sensor (19.22.25)

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the MAF sensor.
  - ▶ Disconnect the electrical connector.
  - ▶ Remove the 2 screws.

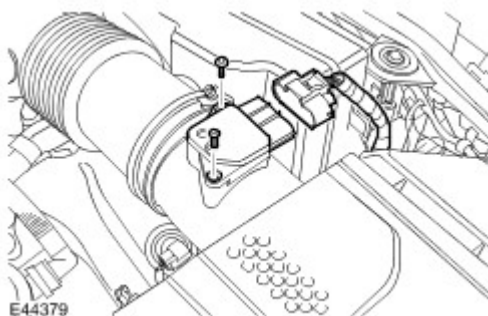

### Installation

1. To install, reverse the removal procedure.
  - ▶ Tighten Torx screws to 2 Nm (1.5 lb.ft).