




Oil Temperature Sensor (12.60.65)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the radiator access panel.

➤ Remove the 4 bolts.

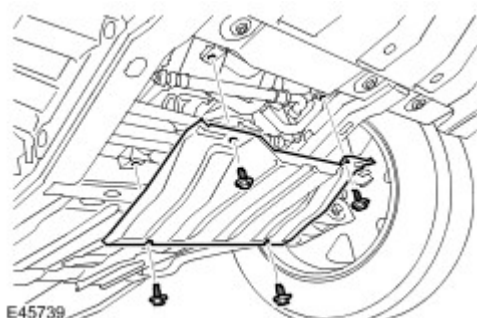

3.  **CAUTION:** Before disconnecting or removing the components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

Remove the oil temperature sensor.

- Disconnect the electrical connector.
- Position a container to collect the fluid.



Installation

1. To install, reverse the removal procedure.
 - Tighten the oil temperature sensor to 20 Nm (15 lb.ft).
 - Tighten the bolts to 10 Nm (7 lb.ft).
2. Check and top-up the engine oil.