

Throttle Position (TP) Sensor (18.30.17)

Removal

NOTE :

The TP sensor is part of the throttle body assembly and cannot be serviced separately.

- 1 . Remove the throttle body. For additional information, refer to [Throttle Body Gasket](#) (Section 303-04B)

Installation

- 1 . Install the throttle body. For additional information, refer to [Throttle Body Gasket](#) (Section 303-04B)