



Engine Oil Pressure (EOP) Sensor (12.60.50)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the engine cover. For additional information, refer to [Engine Cover - 2.7L Diesel \(12.30.50\)](#) (Section 501-05)
3. Disconnect the engine oil pressure (EOP) sensor electrical connector.

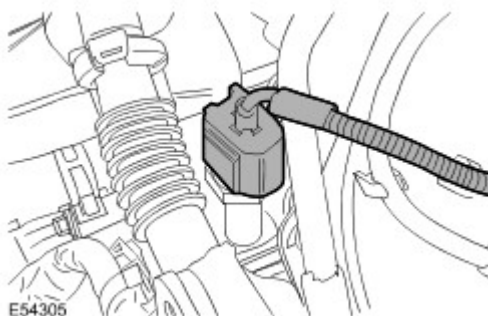

4. Remove the EOP sensor.

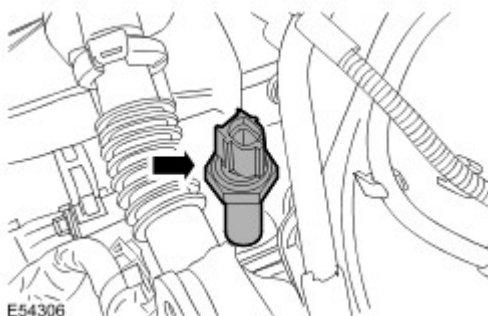

Installation

1. To install, reverse the removal procedure.
▶ Tighten the EOP sensor to 15 Nm (11 lb.ft).
2. Check and top-up the engine oil.