




## Transmission Support Insulator (12.45.08)

### Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the transmission crossmember. For additional information, refer to [Transmission Support Crossmember \(76.10.09 or 76.10.92\)](#) (Section 502-02)

3. **NOTE :**  
4.4L illustration shown, 4.0L and 2.7L Diesel are similar.  
Remove the transmission support insulator.

➤ Remove the 4 bolts.

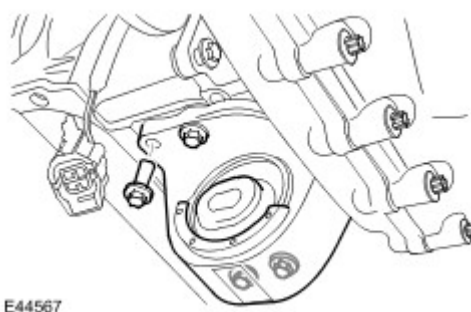

### Installation

1. To install, reverse the removal procedure.
  - Clean the component mating faces.
  - Tighten the bolts to 60 Nm (44 lb.ft).