



Selector Shaft Seal (44.15.34)

Special Service Tools



Seal extractor
307-509-1 (LRT-44-033/1)



Seal extractor
307-509-2 (LRT-44-033/2)



Seal installer
307-509-3 (LRT-44-033/3)

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .


Remove the exhaust system. For additional information, refer to [Exhaust System \(30.10.08\)](#) (Section 309-00)

3 .


Remove the transmission heat shield.




Remove the 4 bolts.

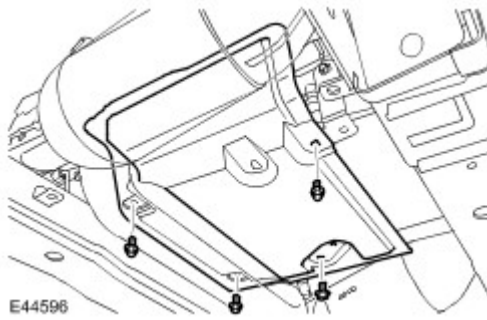


4. Release the selector cable and lever.
- Remove the nut.
 - Compress the latch and release the cable.

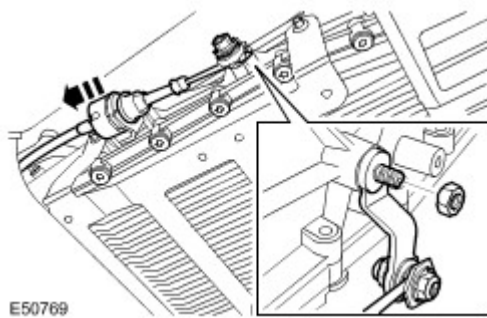

5.  **CAUTION:** Before the disconnection or removal of any components, ensure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.


Remove the selector shaft seal.

- Install 307-509-1 to the seal.
- Install 307-509-2 to 307-509-1 and extract the seal.

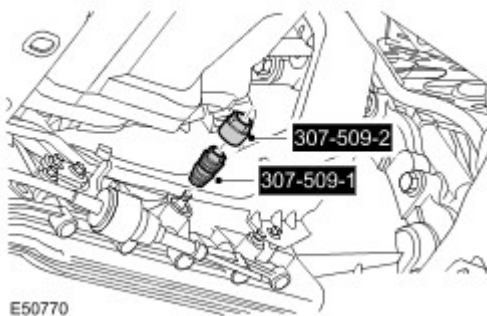

Installation

1. Using 307-509-3, install the selector shaft seal.
- Clean the components.

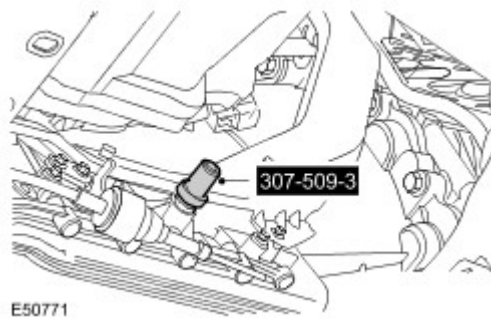

2. Install the selector cable and bracket.
 - Secure with the clip.
 - Tighten the nut to 12 Nm (9 lb.ft).
3. Install the transmission heat shield.
 - Install the bolts.
4. Install the exhaust system. For additional information, refer to [Exhaust System \(30.10.08\)](#) (Section 309-00)