



Published : May 27, 2004

Transmission Fluid Cooler - 4.0L (44.24.10)

Removal

NOTE :

The transmission fluid cooler is part of the radiator assembly and cannot be serviced separately.

- 1 . Remove the radiator. For additional information, refer to [Radiator \(26.40.01\)](#) (Section 303-03A)

Installation

- 1 . Install the radiator. For additional information, refer to [Radiator \(26.40.01\)](#) (Section 303-03A)