


Published : May 10, 2004


Selector Lever Cable (44.15.08)

Removal

1.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

2. Remove the transmission selector lever. For additional information, refer to (Section 307-01)
3. Remove the selector lever cable.
 - Remove the clip.
 - Release the cable.

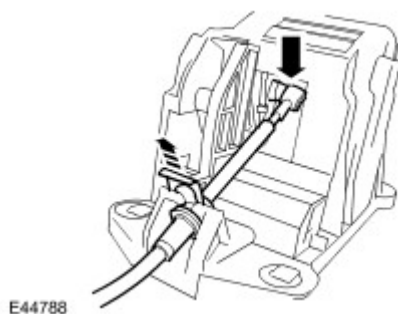

Installation

1. Install the selector lever cable.
 - Clean the components.
 - Secure the cable.
 - Install the clip.
2. Install the transmission selector lever. For additional information, refer to (Section 307-01)