



## Selector Lever Knob (44.15.07)

### Removal

1.



**WARNING:** The gear lever knob will be released suddenly, keep face clear during removal.

Remove the selector lever knob.



Pull the knob upwards.



### Installation

1.



**CAUTION:** Only fit the selector knob when the selector lever is in the 'P' position.

Install the selector lever knob.



Engage the locating tang of the knob with the slot in the selector lever.



Push the knob fully onto the selector lever.