


Published : May 26, 2004

## Selector Lever (44.15.04)


### Removal

1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


2. If installed, remove the transmission undershield.

➤ Remove the 6 bolts.

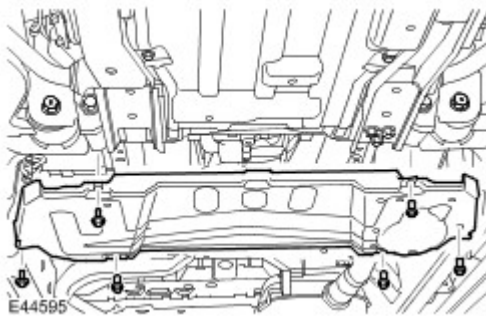

3. Remove the transmission heat shield.


➤ Remove the 4 bolts.

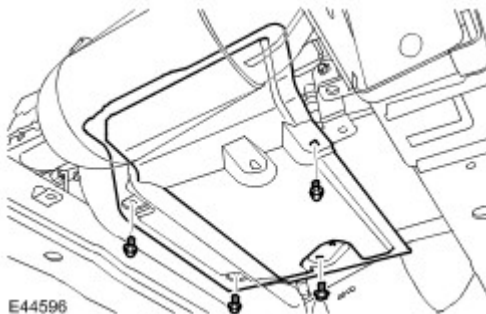


4. Release the selector cable.

➤ Using an additional wrench, restrain the clamping bush and loosen the locknut.


➤ Compress the latch and release the cable.

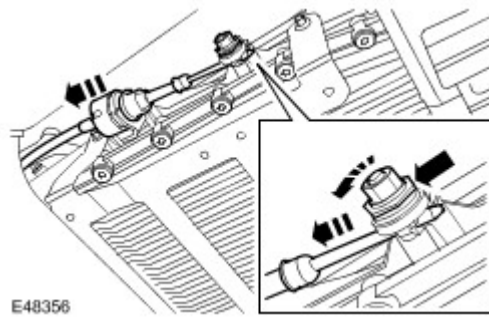

5. Release the selector cable from its guide bracket.

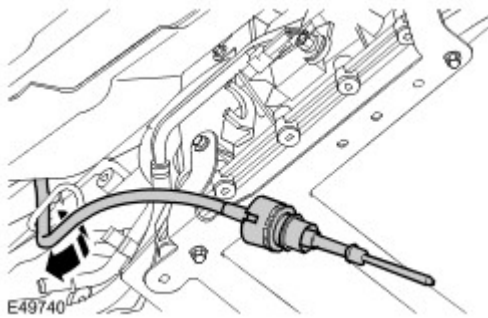

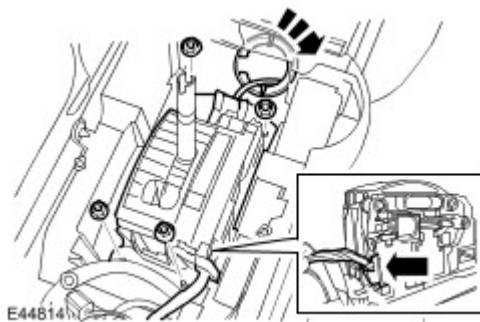

6. Remove the floor console upper trim panel.
7. Remove the transmission selector lever.
  - Remove the 4 nuts.
  - Disconnect the electrical connector.
  - Release the selector cable from the body.



## Installation

1. Install the transmission selector lever.
  - Secure the cable to the floor.
  - Connect the electrical connector.
  - Tighten the nuts to 10 Nm (7 lb.ft).
2. **NOTE :**  
Do not tighten the locking nut at this stage.

Connect the selector cable to the transmission.


-  Engage the inner cable with the lever clamping bush.
-  Connect the selector cable to its abutment bracket.

3 . Position the selector cable to its guide bracket.

4 . Install the floor console upper trim panel.

5 . Adjust the selector cable.

6 . Install the transmission heat shield.

-  Tighten the bolts to 10 Nm (7 lb.ft).

7 . If installed, install the transmission undershield.

-  Tighten the bolts to 10 Nm (7 lb.ft).