



Clutch Slave Cylinder (33.35.01)

Removal

NOTE :

The clutch release bearing is included with the slave cylinder assembly.

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .

Remove the transmission. For additional information, refer to [Transmission \(37.20.02.99\)](#) (Section 308-03)

3 .




CAUTION: Always plug any open connections to prevent contamination.

NOTE :

Position cloth to collect fluid spillage.

Remove the fluid pipe.


- Remove the clip.
- Remove the bolt.
- Remove the clamp.
- Remove and discard the O-ring seal.

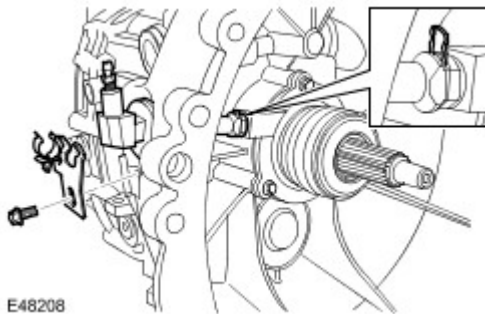

4 .

Remove the clutch slave cylinder and release bearing assembly.

- Remove the 3 bolts.

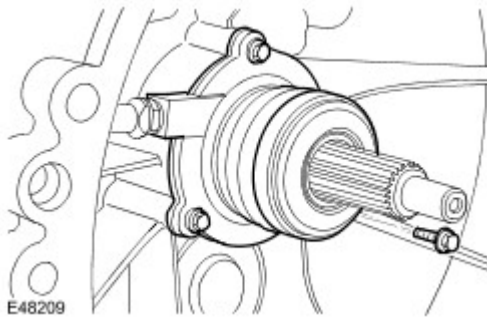

Installation

- 1 . Install the clutch slave cylinder and release bearing assembly.
 - Clean the component mating faces.
 - Tighten the bolts to 10 Nm (7 lb.ft).
- 2 . Install the fluid pipe.
 - Clean the component mating faces.
 - Install a new O-ring seal.
 - Install the clip.
 - Install the clamp.
 - Tighten the bolt to 10 Nm (7 lb.ft).
- 3 . Install the transmission. For additional information, refer to [Transmission \(37.20.02.99\)](#) (Section 308-03)