




Input Shaft Seal (37.23.06)

Special Service Tools

308-615

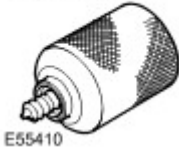

E55410

Seal extractor
308-615

100-012



E54135

Impulse extractor
100-012 (LRT-99-004)

308-618



E55405

Seal installer
308-618

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


2 .

Remove the clutch slave cylinder and release bearing assembly. For additional information, refer to [Clutch Slave Cylinder \(33.35.01\)](#) (Section 308-02)


3 .

NOTE :

The screw holes are located through the rubber membrane.
Locate the hole for the extraction tool screw.

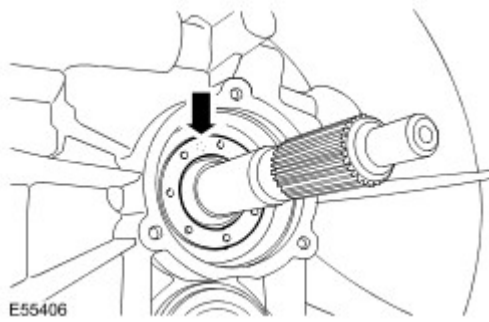


4. Remove the input shaft seal.
 - ▶ Install the special tool.

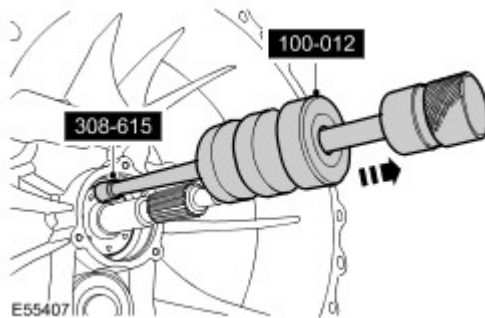

Installation

1. Install the input shaft seal.
 - ▶ Clean the component mating faces.
 - ▶ Use the special tool.

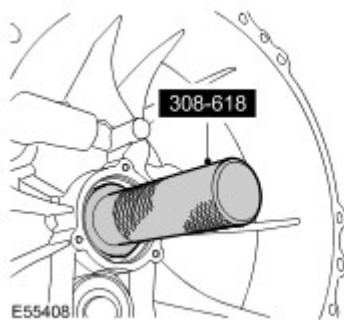

2. Install the clutch slave cylinder and release bearing assembly. For additional information, refer to [Clutch Slave Cylinder \(33.35.01\)](#) (Section 308-02)
3. Drain and refill the transmission. For additional information, refer to [Transmission Draining and Filling \(37.24.01\)](#) (Section 308-03)