



Output Shaft Speed (OSS) Sensor (37.16.30)

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.

2 .

If installed, remove the transmission undershield.



Remove the 6 bolts.

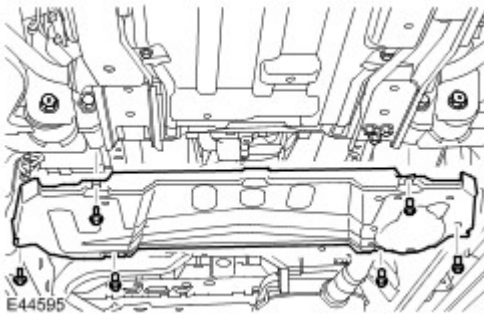

3 .


Remove the OSS sensor.



Disconnect the electrical connector.



Remove the Torx screw.

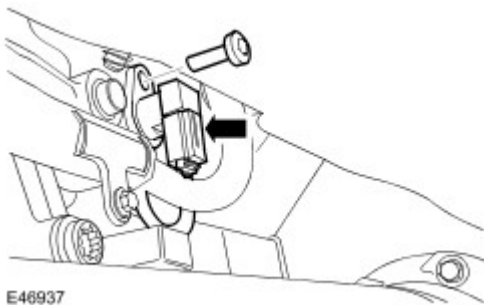

Installation

1 .

Install the OSS sensor.



Clean the component mating faces.



Tighten the Torx screw to 10 Nm (7 lb.ft).



Connect the electrical connector.

2 .

If installed, install the transmission undershield.



Tighten the bolts to 10 Nm (7 lb.ft).

