


Published : May 12, 2004

## Four-Wheel Drive (4WD) Control Module (41.30.01)

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the battery. For additional information, refer to [Battery \(86.15.01\)](#) (Section 414-01)
3. Remove the four wheel drive control module cover.
  - Depress the 2 clips.
  - Release the cover.

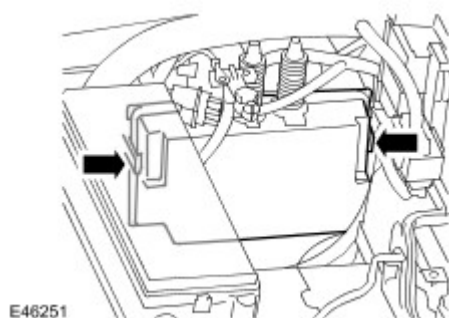

4. Release and remove the four wheel drive control module.
  - Depress the 2 clips.
  - Disconnect the 3 electrical connectors.



### Installation

1. To install, reverse the removal procedure.
2. Program a new control module using T4.