



High/Low Range Sensor (41.30.07)

Removal

1 .



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .

Remove the crossmember. For additional information, refer to [Transmission Support Crossmember \(76.10.09 or 76.10.92\)](#) (Section 502-02)


3 .



CAUTION: To avoid damage to the joints or gaiters, do not allow the transmission to hang on the driveshafts.

Remove the mode sensor.

- Lower the rear of the transmission for access.
- Disconnect the electrical connector.
- Remove the 2 Torx bolts.

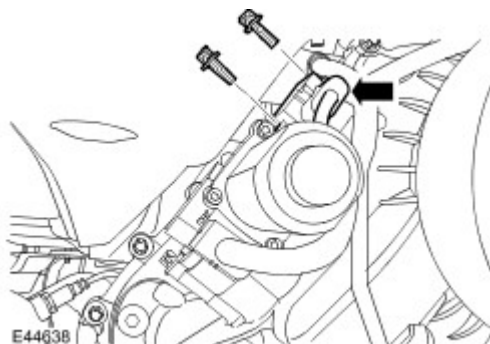

Installation

1 .

To install, reverse the removal procedure.

- Clean the components.
- Tighten the Torx bolts to 10 Nm (7 lb.ft).

2 .

Install the crossmember. For additional information, refer to [Transmission Support Crossmember \(76.10.09 or 76.10.92\)](#) (Section 502-02)

3 .

Use T4 to re-calibrate a new mode sensor.