

: May 12, 2004

Transfer Case Shift Motor (41.30.03)




Raise and support the vehicle.

2. Remove the transmission crossmember.



Remove the shift motor.

- Lower the rear of the transmission for access.
- Disconnect the electrical connector.
- Remove the 4 Torx bolts.

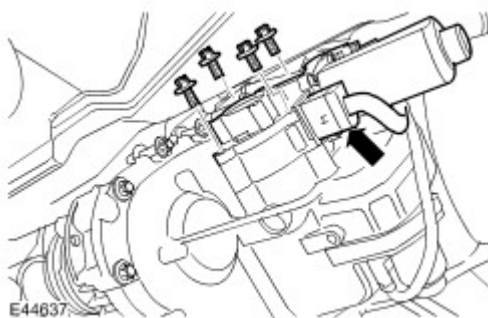

1. Install the shift motor.
- Clean the components.
 - Tighten the Torx bolts to 25 Nm (18 lb.ft).
 - Connect the electrical connector.

2. Install the transmission crossmember.

3. Use T4 to re-calibrate a new transfer case shift motor.