

Published : May 24, 2004

Transfer Case Input Shaft Seal - 2.7L Diesel (41.20.50)

Special Service Tools

308-598

Oil seal installer
308-598

303-903

Oil seal remover
303-903 (LRT-12-092)

Removal

1.



WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2.

Remove the transfer case. For additional information, refer to [Transfer Case - 2.7L Diesel \(41.20.25.99\)](#) (Section 308-07)

3.




CAUTION: Care must be taken to avoid damage to the seal register and running surface.


Carefully remove and discard the oil seal.



Use the special tool.

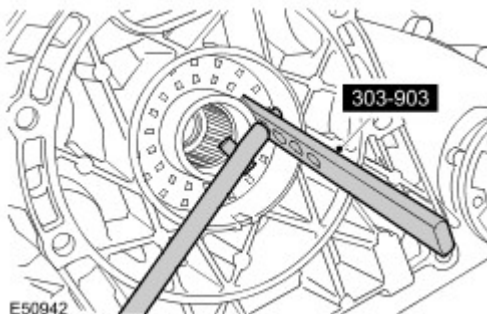


Installation

1.  **CAUTION: Oil seals must be fitted dry.**

Install a new seal.

- ▶ Clean the seal register.
- ▶ Use the special tool.

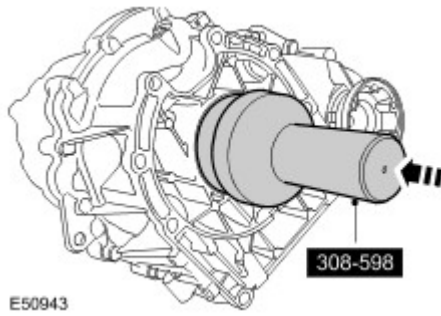

2. Install the transfer case. For additional information, refer to [Transfer Case - 2.7L Diesel \(41.20.25.99\)](#) (Section 308-07)