



## Transfer Case Input Shaft Seal - 4.0L (41.20.50)

### Special Service Tools



Oil seal remover  
303-903 (LRT-12-092)



Oil seal installer  
308-598

### Removal

1.



**WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2.

Remove the transfer case. For additional information, refer to [Transfer Case - 4.0L \(41.20.25.99\)](#) (Section 308-07)

3.




**CAUTION:** Care must be taken to avoid damage to the seal register and running surface.


Carefully remove and discard the oil seal.



Use the special tool.

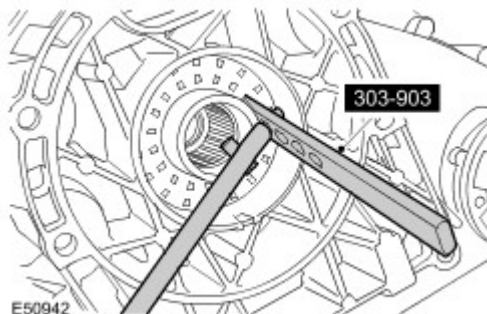


## Installation

1.  **CAUTION: Oil seals must be fitted dry.**

Install a new seal.

- ▶ Clean the seal register.
- ▶ Use the special tool.

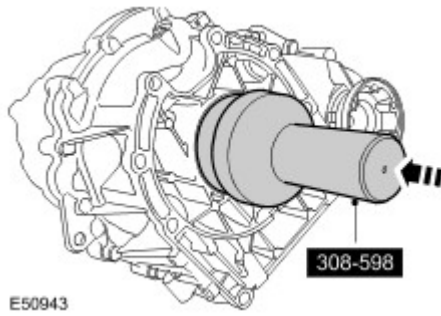

2. Install the transfer case. For additional information, refer to [Transfer Case - 4.0L \(41.20.25.99\)](#) (Section 308-07)