




Transfer Case - 4.0L (41.20.25.99)

Removal


1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)

2.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**


Raise and support the vehicle.

3. Remove the front driveshaft. For additional information, refer to [Front Driveshaft - 4.0L \(47.15.02\)](#) (Section 205-01)
4. Remove the rear driveshaft. For additional information, refer to [Rear Driveshaft \(47.15.03\)](#) (Section 205-01)
5. Remove the transmission support insulator.

➤ Remove the 4 bolts.

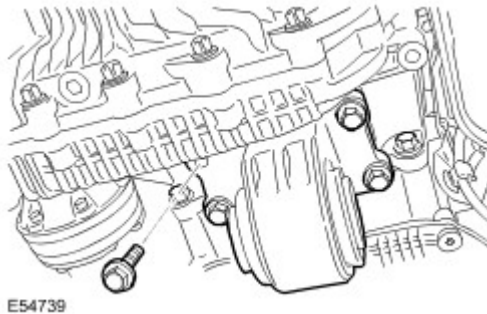


6. Disconnect the transfer case 3 electrical connections.

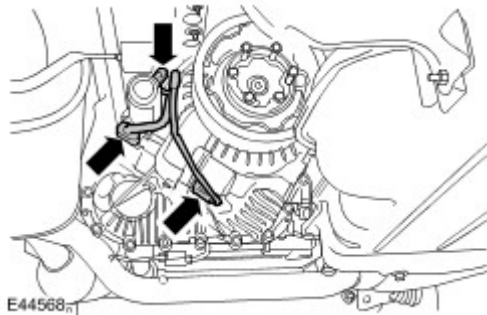

7. Release the wiring harness from the transfer case.

➤ Remove the 3 bolts.

➤ Release the clip.

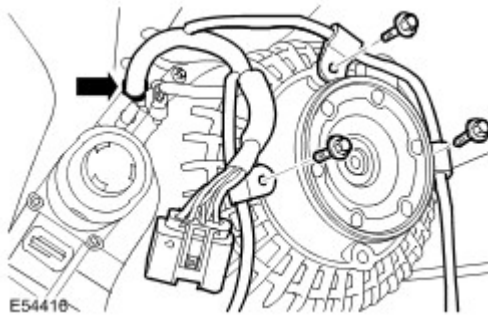


8.



CAUTION: Always plug any open connections to prevent contamination.

Disconnect the breather line.

▶ Depress the locking ring.

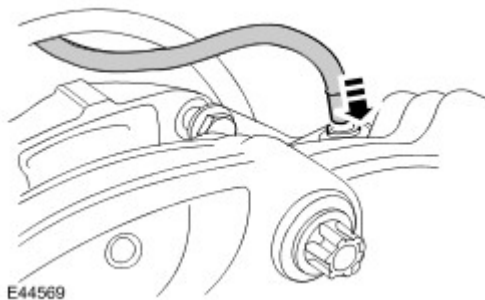


9.

Release the fuel line support bracket.

▶ Release the fuel lines.

▶ Remove the 2 bolts.

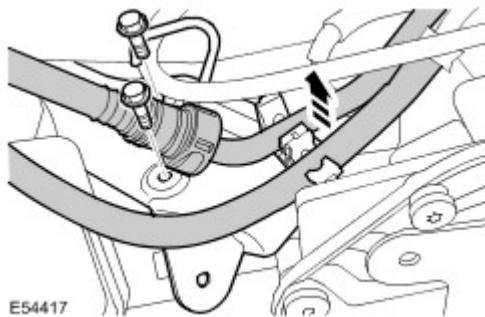

10.

Support the transmission on a jack.

11.



WARNING: Secure the component to the transmission jack.

Using a transmission jack, support the transfer case.

12.

With assistance, remove the transfer case.

Remove the 8 bolts.



Move the fuel hose support bracket aside.



Remove the O-ring seal.

