



## Tailpipe (30.10.22)

### Special Service Tools



Pipe cutter-exhaust  
100-051 (LRT-99-027)

### Removal

1 .




**WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2 .

Remove the tail pipe.

- Using 100-051, cut the tail pipe at the point indicated by a depression in the pipe.
- Disconnect from the exhaust hanger.

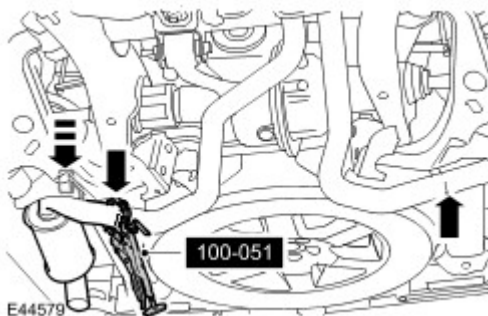

### Installation

1 .

**NOTE :**

Do not tighten the retaining clamp at this stage.  
Install the tail pipe.

- Clean the components.
- Install the retaining clamp.

2 .

Align the tail pipe and tighten the retaining clamp to 55 Nm (40 lb.ft).