


Published : Apr 8, 2004



Plenum Chamber (80.15.62)

Removal

1. Remove the A-pillar mouldings. For additional information, refer to [A-Pillar Moulding LH](#) (Section 501-08)
2. Remove the windshield wiper arms. For additional information, refer to [Front Wiper Pivot Arm \(84.15.02\)](#) (Section 501-16)
3. Release the hood seal from the plenum chamber.

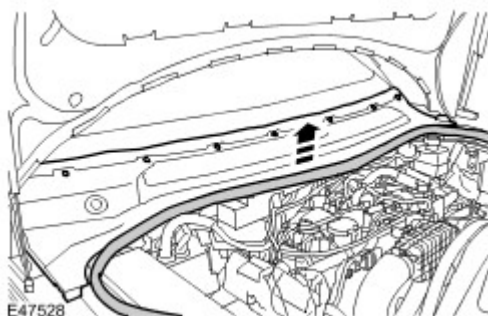


4. Remove the plenum chamber panel.



Release the 8 clips.

5. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the clips from the plenum chamber panel.

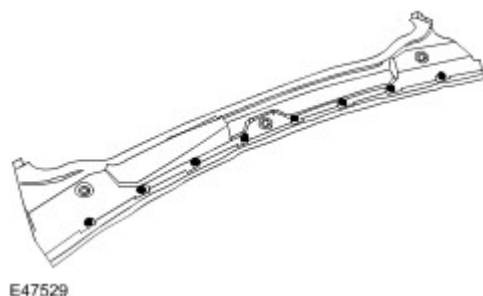

Installation

1. To install, reverse the removal procedure.