



## Receiver Drier (82.17.03)

### Removal

#### NOTE :

The receiver drier need only be changed under the following circumstances: There is dirt in the refrigerant circuit ( eg. compressor seizure ). The system is leaking and refrigerant has been lost to atmosphere. Refrigerant circuit has been open more than 24 hours due to repair.

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the condenser core. For additional information, refer to [Condenser Core \(82.15.07\)](#) (Section 412-03)
- 3 . Remove the receiver drier support bracket clamp.
  - Remove the bolt.

- 4 .  **CAUTION: Immediately cap all refrigerant lines to prevent ingress of dirt and moisture.**

Remove the receiver drier.

- Remove the bolt.
- Remove and discard the 2 O-ring seals.



### Installation

- 1 . Install the receiver drier.
  - Clean the component mating faces.
  - Install new O-ring seals.
  - Install the clamp.
  - Tighten the bolts to 10 Nm (7 lb.ft).
- 2 . Install the condenser core. For additional information, refer to [Condenser Core \(82.15.07\)](#) (Section 412-03)
- 3 .

Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)