


## Auxiliary Blower Motor Control Module (82.26.45)

### Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the LH C-pillar lower trim panel For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
- 3 . **NOTE :**  
Note the fitted position.  
Remove the blower motor resistor.
  - Disconnect the electrical connector.
  - Remove the 2 screws.

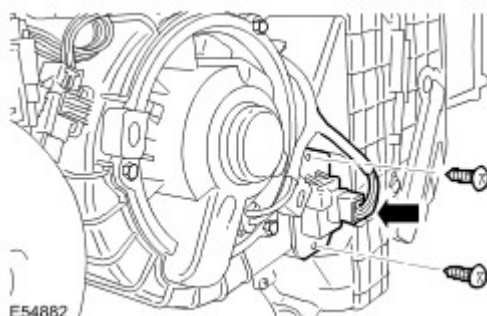

### Installation

- 1 . **NOTE :**  
Align to the position noted on removal.  
Install the resistor.
  - Tighten the screws.
  - Connect and secure the electrical connector.
- 2 . Install the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
- 3 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)