


Blower Motor (82.26.33)

Removal

- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the LH C-pillar lower trim panel For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
- 3 . **NOTE :**
Note the fitted position.
Remove the blower motor.
 - Disconnect the electrical connector.
 - Remove the 3 screws.

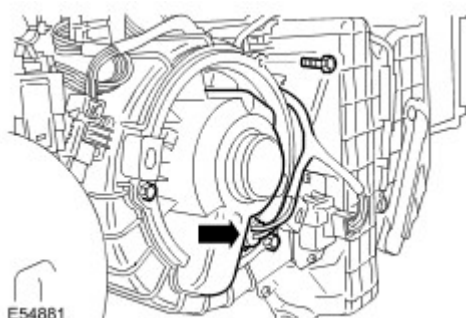

Installation

- 1 . Install the blower motor.
 - Tighten the screws.
 - Connect and secure the electrical connector.
- 2 . Install the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
- 3 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)