


Published : May 18, 2004

Ambient Air Temperature Sensor (80.40.31)

Removal

- 1 . Remove the radiator grille. For additional information, refer to [Radiator Grille \(76.55.03\)](#) (Section 501-08)
- 2 . Remove the ambient air temperature sensor.
 - ▶ Disconnect the electrical connector.
 - ▶ Release the clip.

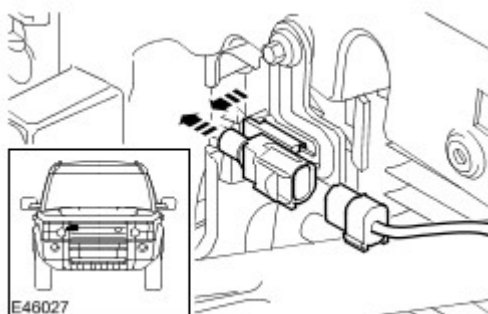

Installation

- 1 . To install, reverse the removal procedure.