


Climate Control Assembly (80.10.02)

Removal

1. Remove the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)
2. Remove the climate control assembly.
 - Remove the 4 Torx screws.
 - Disconnect the 4 electrical connectors.

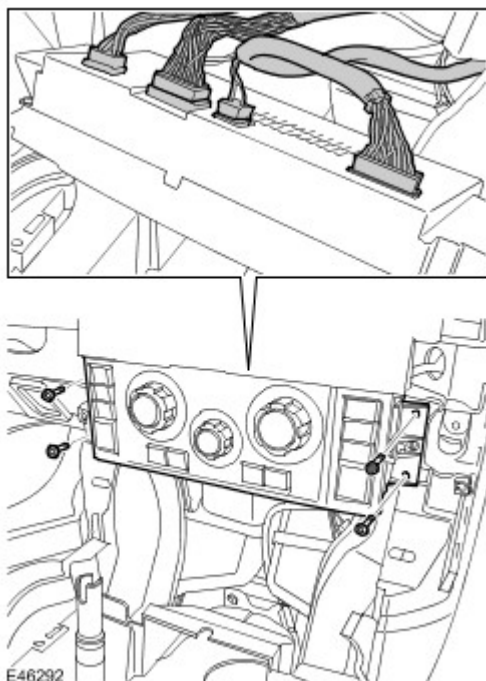

Installation

1. Install the climate control assembly.
 - Connect the electrical connectors.
 - Tighten the Torx screws.
2. Install the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)
3. Using T4, configure a new climate control assembly.