



In-Vehicle Temperature Sensor (82.20.93)

Removal

- 1 . Fully extend the steering column for access.
- 2 . Remove the instrument panel access panel.
 - ▶ Release the 2 clips.

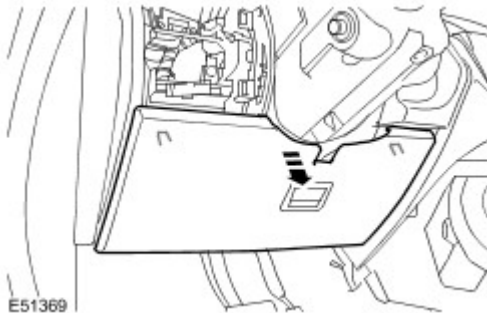

- 3 . Remove the steering column upper shroud.
 - ▶ Release the 6 clips.

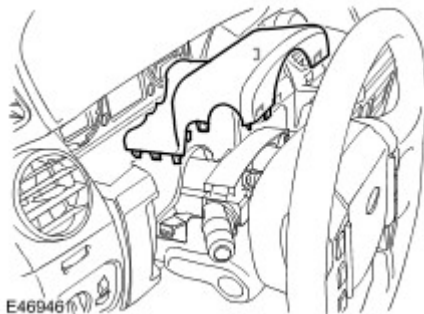


- 4 . Remove the steering column lower shroud.
 - ▶ Remove the 3 Torx screws.
 - ▶ Release the steering column adjustment lever.




- 5 . Remove the steering column side trim panel.

- Release the clips.
- Repeat the above procedure for the other side.

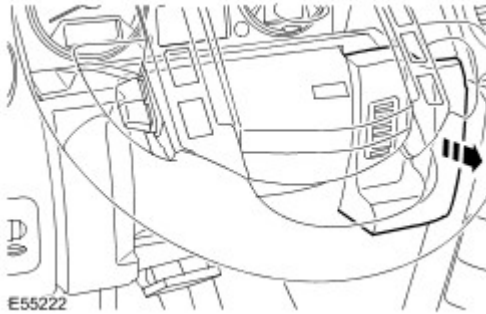


6. Release the steering column gaiter panel.

- Remove the 2 Torx screws.
- Release the 2 clips.

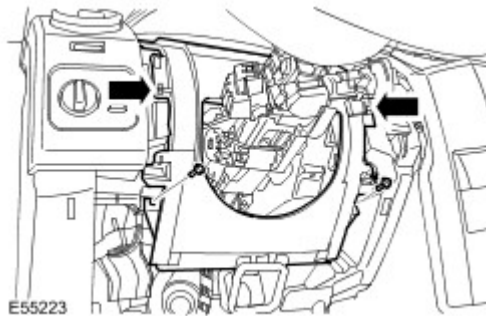

7. Remove the in-vehicle temperature sensor.

- Release the 2 clips.
- Disconnect the electrical connector.
- Disconnect the hose.

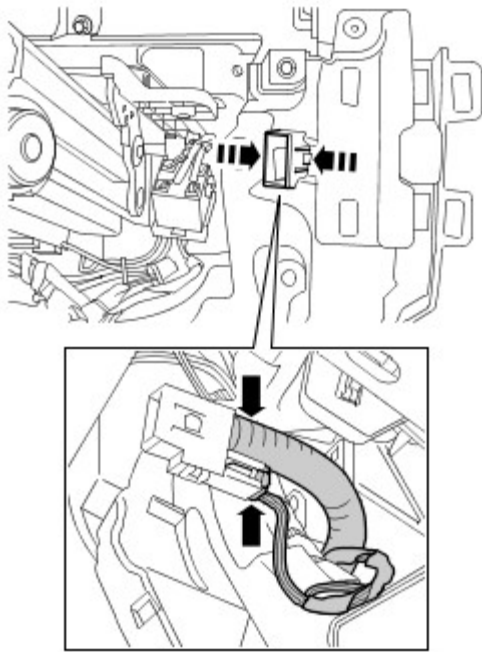

E55224

Installation

- 1 . Install the in-vehicle temperature sensor.
 - Connect the hose.
 - Connect the electrical connector.
 - Secure the clips.
- 2 . Install the steering column gaiter panel.
 - Secure with the clips.
 - Tighten the Torx screws.
- 3 . Install the steering column side trim panels.
 - Secure with the clips.
- 4 . Install the steering column shrouds.
- 5 . Install the instrument panel access panel.