


Published : Jun 14, 2004

Sunload Sensor (82.20.92)

Removal

- 1 . Remove the instrument panel upper section speaker grille.
 - ▶ Release the 4 clips.
- 2 . Remove the sunload sensor.
 - ▶ Release the 2 clips.
 - ▶ Disconnect the electrical connector.

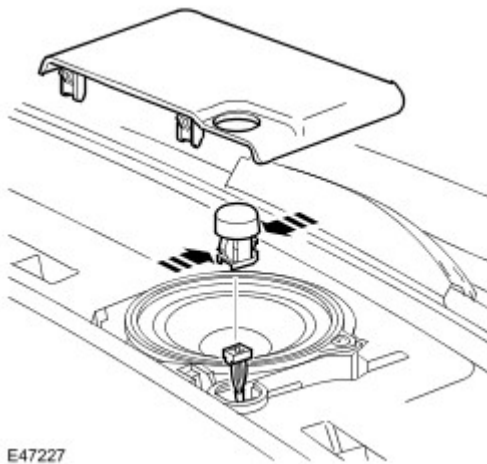

Installation

- 1 . To install, reverse the removal procedure.