

Published : Jul 14, 2004


Low Tire Pressure Module (86.54.05)

Removal

NOTE :

If the tire pressure module is to be replaced then T4 must be connected and the correct procedures adhered to, prior to battery disconnection.


- 1 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 2 . Remove the LH A-pillar upper trim panel. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
- 3 . Remove the LH B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
- 4 . Remove the LH C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
- 5 . Remove the LH sun visor.
 - Remove the cover.
 - Remove the 2 screws.
 - Disconnect the electrical connector.

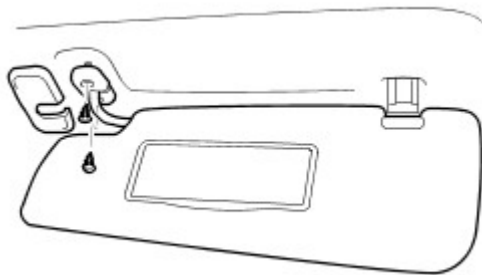


- 6 . Remove the sun visor retaining clip.
 - Release the screw cover.
 - Remove the screw.



7. Remove the LH passenger assist handles.
- ▶ Carefully release the 6 screw covers.
 - ▶ Remove the 6 screws.

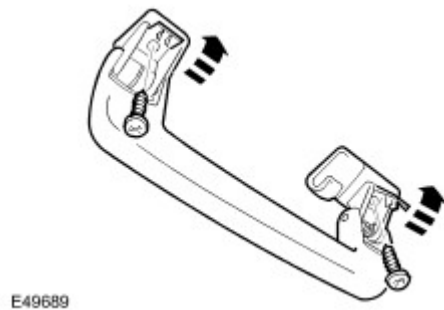

8. Release the LH side of the headliner.
- ▶ Release the 6 clips.

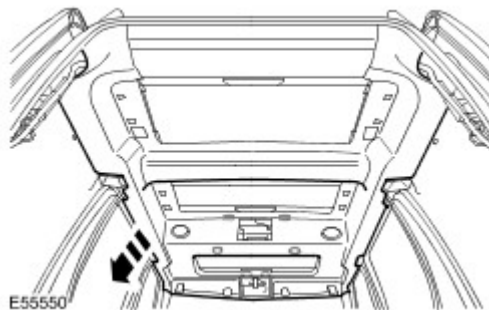

9. Remove the low tire pressure module.
- ▶ Disconnect the 2 electrical connectors.
 - ▶ Remove the 2 bolts.



Installation

1. Install the low tire pressure module.
- ▶ Tighten the bolts to 10 Nm (7 lb.ft).
 - ▶ Connect the electrical connectors.

2.

Secure the LH side of the headliner.

- ▶ Carefully secure the clips.

3 . Install the LH passenger assist handles.

- ▶ Install the screws.
- ▶ Install the screw covers.

4 . Install the sun visor retaining clip.

- ▶ Install the screw.
- ▶ Install the screw cover.

5 . Install the LH sun visor.

- ▶ Install the screws.
- ▶ Install the screw covers.
- ▶ Connect the electrical connector.

6 . Install the LH C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)

7 . Install the LH B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)

8 . Install the LH A-pillar upper trim panel. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)

9 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)