


Parking Aid Speaker (86.54.19)

Removal

- 1 . Remove the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
- 2 . Remove the loadspace trim mounting bracket.
 - Remove the 2 screws.
 - Release the 2 clips.
- 3 . Remove the rear parking aid speaker.
 - Disconnect the electrical connector.
 - Remove the 2 screws.

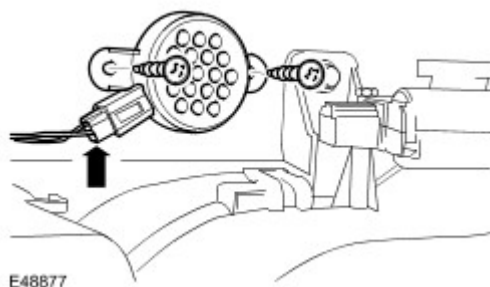

Installation

- 1 . To install, reverse the removal procedure.