



Auxiliary Battery Tray (76.10.31)

Removal


1. Remove the battery cover.
 - ▶ Release the 2 mounting clips.

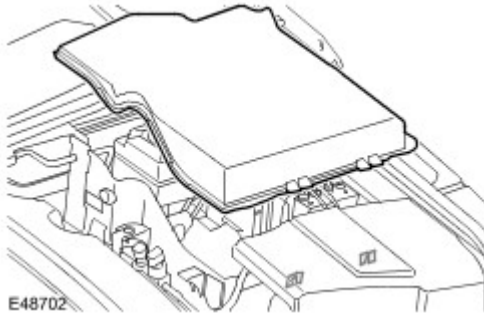

2. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
3. If installed, remove the auxiliary battery.
4. Remove the engine compartment upper heat shield.
 - ▶ Remove the screw.
 - ▶ Release the 2 mounting clips.

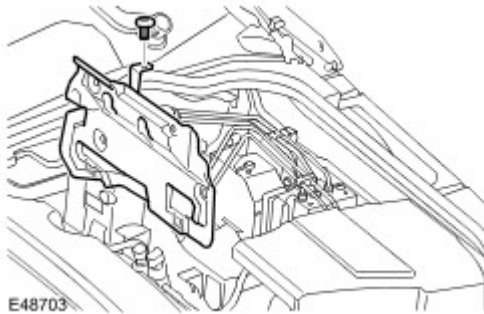


5. Remove the auxiliary battery compartment side wall.
 - ▶ Release the battery positive cable and grommet.
 - ▶ Release the 4 clips.

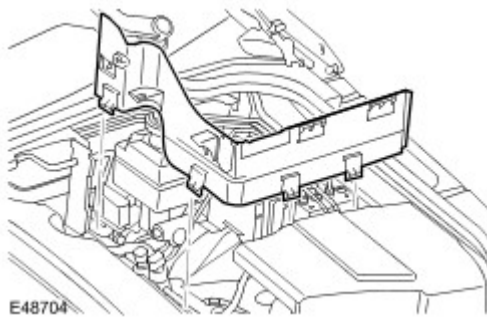

- 6 . Remove the auxiliary battery tray.

➤ Remove the 3 nuts.

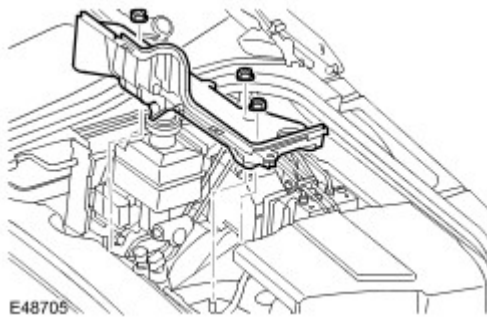

Installation

- 1 . To install, reverse the removal procedure.

➤ Tighten the nuts to 12 Nm (9 lb.ft).