


Battery (86.15.01)


Removal

- 1 . Secure the hood in the service position.
➤ Release the support struts.

- 2 . Remove the battery cover.

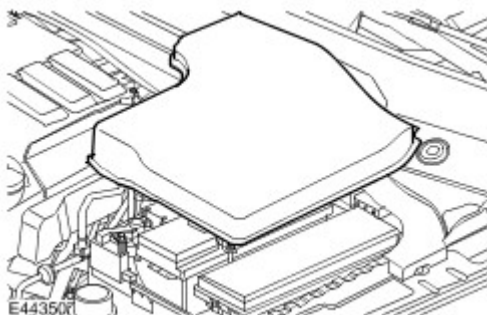

- 3 . Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
- 4 . Disconnect the battery positive cable.
- 5 . Remove 2 bolts securing the battery clamp and remove the clamp.

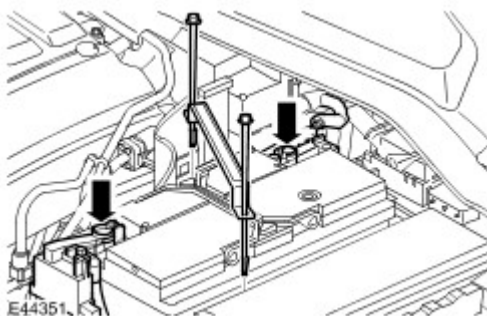

- 6 . Remove the battery.

Installation

- 1 . **NOTE :**
Apply petroleum jelly to the battery terminals.
To install, reverse the removal procedure.
➤ Tighten the battery clamp bolts to 5 Nm (4 lb.ft).
➤ Tighten the battery terminals to 5 Nm (4 lb.ft).