



Battery Tray (76.10.30)

Removal


1. Remove the battery. For additional information, refer to [Battery \(86.15.01\)](#) (Section 414-01)
2. Remove the engine compartment upper heat shield.
 - Remove the screw.
 - Release the 2 mounting clips.

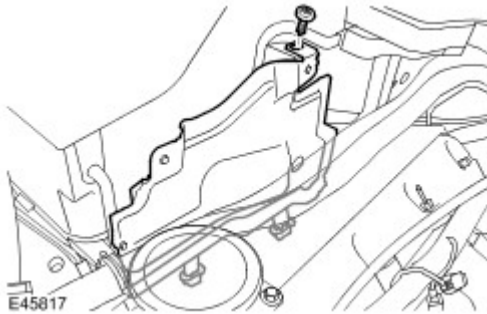


3. Remove the battery compartment side wall.
 - Release the battery positive cable and grommet.
 - Release the 4 clips.

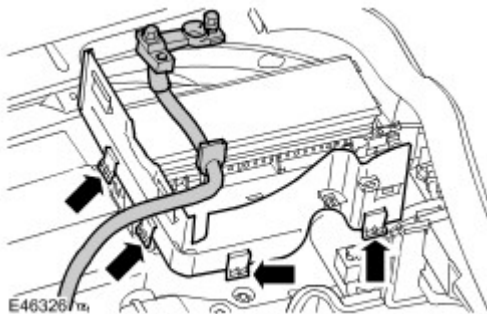

4. Remove the battery tray.
 - Remove the 3 nuts.

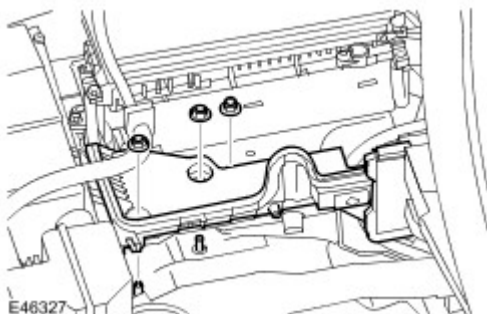

Installation

- 1 . To install, reverse the removal procedure.
 -  Tighten the nuts to 12 Nm (9 lb.ft).