


Published : Jun 14, 2004

Rear Door Speaker (86.50.12)

Removal

1. Remove the rear door trim panel. For additional information, refer to [Rear Door Trim Panel \(76.34.04\)](#) (Section 501-05)
2. Remove the speaker.
 - ▶ Disconnect the electrical connector.
 - ▶ Remove the 4 screws.

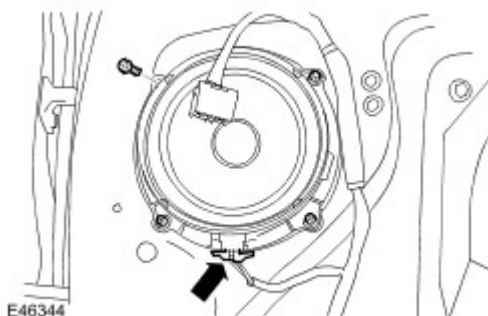

Installation

1. Install the speaker
 - ▶ Tighten the screws.
 - ▶ Connect the electrical connector.
2. Install the rear door trim panel. For additional information, refer to [Rear Door Trim Panel \(76.34.04\)](#) (Section 501-05)