


Tailgate Speaker (86.50.47)

Removal




1. Remove the tailgate trim panel. For additional information, refer to [Tailgate Trim Panel \(76.49.23\)](#) (Section 501-05)
2. Remove the tailgate speaker assembly.
 - Remove the 10 Torx bolts.
 - Disconnect the 2 electrical connectors.

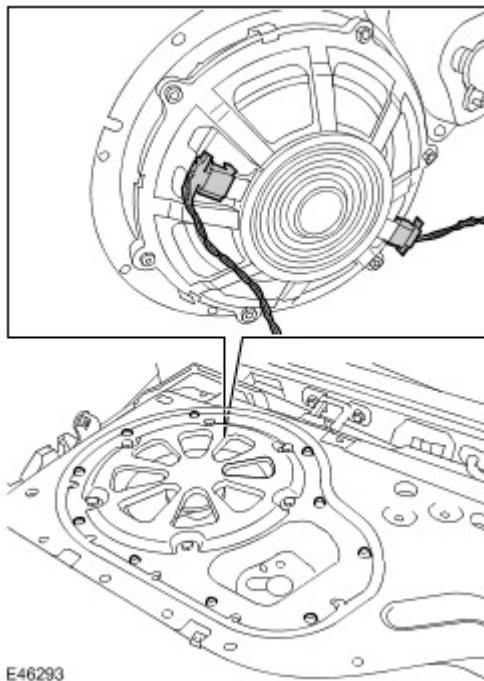

3. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the tailgate speaker.
 - Remove the 6 bolts.



Installation

- 1 . Install the tailgate speaker.
 -  Tighten the bolts to 10 Nm (7 lb.ft).
- 2 . Install the tailgate speaker assembly.
 -  Connect the electrical connectors.
 -  Tighten the Torx bolts to 10 Nm (7 lb.ft).
- 3 . Install the tailgate trim panel. For additional information, refer to [Tailgate Trim Panel \(76.49.23\)](#) (Section 501-05)