


Published : Jul 13, 2004

## Adaptive Front Lighting Module (86.54.06)

### Removal

- 1 . Passenger side: Remove the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)
- 2 . Remove the adaptive front lighting control module.
  - Disconnect the electrical connector.
  - Remove the bolt.

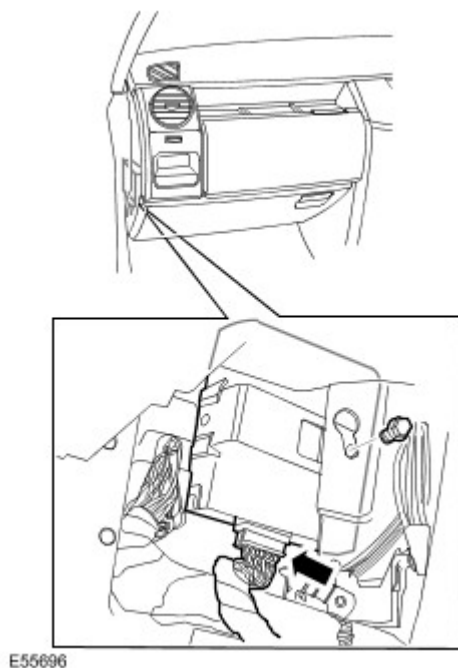

### Installation

- 1 . Install the adaptive front lighting control module.
  - Tighten the bolt to 10 Nm (7 lb.ft).
  - Connect the electrical connector.
- 2 . Install the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)