

Front Fog Lamp (86.40.96)

Removal


1 .

NOTE :

Release each clip individually. Clips may fall off if care is not taken.

Remove the front fog lamp bezel.


▶ Release the 6 clips.

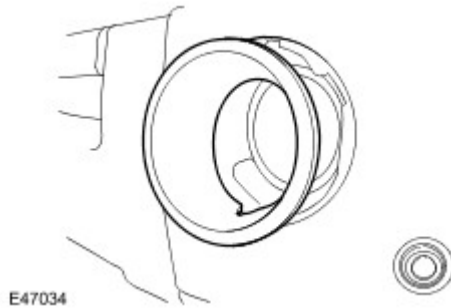

2 .

Release the front fog lamp.


▶ Remove the 3 screws.

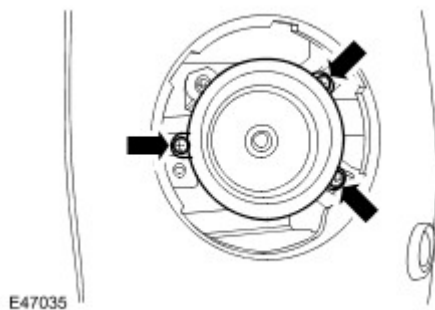

3 .

Remove the front fog lamp.

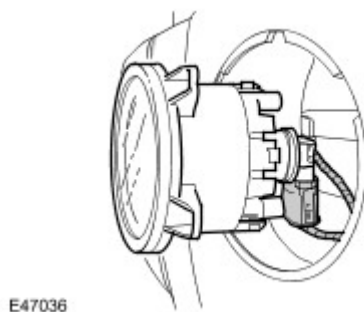

▶ Disconnect the front fog lamp electrical connector.



Installation

1 .

Connect the front fog lamp electrical connector.

- 2 . Install the front fog lamp.
 Tighten the screws.
- 3 . Install the front fog lamp bezel.
 Secure the clips.
- 4 . Check the fog lamp beam alignment.