

Published : Nov 19, 2004

Headlamp Adjustment (86.40.17)

NOTE :

With self leveling suspension, make sure the vehicle is at the standard ride height.

NOTE :

The headlamp setting is 1.2 % below horizontal and parallel.

NOTE :

NAS vehicles have vertical adjustment only.

1 . Align the headlamp beam setting equipment to one headlamp.


2 . Switch the headlamps on and to dipped beam.

3 . **NOTE :**

NAS vehicles have vertical adjustment only.

Adjust the headlamps with a Philips screwdriver.

- Rotate the adjusters A and B by an equal amount for vertical alignment.
- Rotate the adjusters A or B for horizontal alignment.

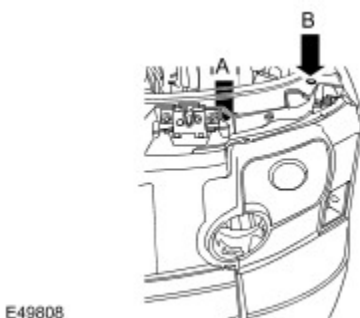

4 . To adjust the second headlamp, repeat the above procedure.