



Headlamp Switch (86.65.09)

Removal

- 1 . Remove the driver side register trim panel.
 - Release the 2 clips.
 - Disconnect the electrical connector.

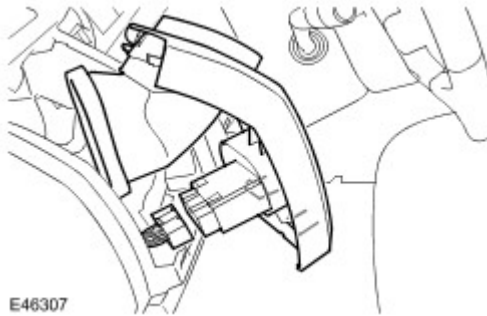

- 2 . Remove the headlamp switch.
 - Remove the 4 Torx screws.

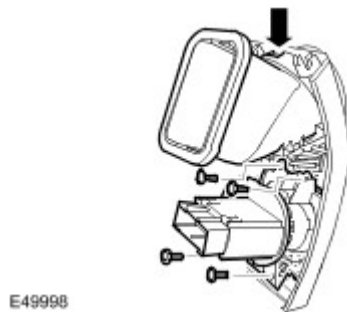

Installation

- 1 . Install the headlamp switch.
 - Tighten the Torx screws.
- 2 . Install the driver side register trim panel.
 - Connect the electrical connector.
 - Secure with the clips.