


Published : May 13, 2004


## Central Junction Box (CJB) (86.70.56)

### Removal

- 1 . If the central junction box (CJB) is to be replaced, connect T4 to the vehicle.
- 2 . Remove the glove compartment. For additional information, refer to [Glove Compartment \(76.52.03\)](#) (Section 501-12)
- 3 . Remove the passenger side closing trim panel.
  - Release the clip.
  - Remove the 2 screws.
  - Disconnect the electrical connector.

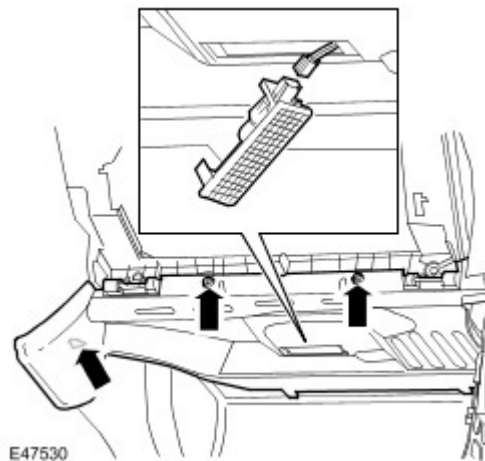

- 4 . Remove the CJB.
  - Remove the 2 nuts.
  - Disconnect the 6 electrical connectors.

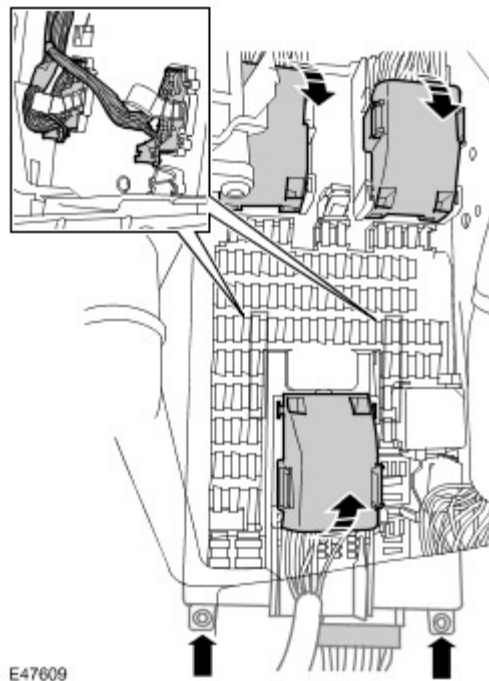

## Installation

- 1 . Install the CJB.
  - Connect the electrical connectors.
  - Tighten the nuts to 10 Nm (7 lb.ft).
- 2 . Install the closing trim panel.
  - Connect the electrical connector.
  - Secure the clip.
- 3 . Install the glove compartment. For additional information, refer to [Glove Compartment \(76.52.03\)](#) (Section 501-12)
- 4 . Initiate a new CJB using T4.